
1000		×.				
	1	2	3	4	5	6
	PHILIPS					
	hue				а. « Г. _у . :	
	Always make	e sure the luminaire is detached f e sure the DC cable is detached fi e operating light source may cau	om the power supply			
B						


#	Disassemble/dismantle steps	Tools needed
а	Remove the screw (2)	ALLEN KEY
b	Remove the glass (1) by turning counter clockwise	-
 с	Remove cover (12) by removing screws (9)	- _{V.}
d	Slide LIGHT SOURCE - HUE CONNECT (11) out of connection box (8)	-
е	Remove low voltage wires of the cable of LIGHT SOURCE - HUE CONNECT (11)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
f	Rermove diffuser (3) by unclicking from the inside	FLATHEAD SCREWDRIVER
g	Remove heat sink (7) by unscrewing screws (10)	TORXHEAD SCREW DRIVER T10
h	Remove LIGHT SOURCE - LED MODULE (5) by unscrewing screws (4)	TORXHEAD SCREW DRIVER T10
i	Remove low voltage wires of the LIGHT SOURCE - LED STRIP (6) and LIGHT SOURCE - LED MODULE (5)	- i statat
j	Remove the bracket (17) from the base (13) by unscrewing screws (16)	CROSSHEAD SCREWDRIVER PZ
k	Remove the CONTROL GEAR - PSU (14) from the base (13) by unscrewing screws (15)	TORXHEAD SCREW DRIVER T10
	Unclamp 2 close end connectors from the low voltage wires from CONTROL GEAR - PSU (14)	PINCER
m	Remove LIGHT SOURCE-LIGHT STRIP (8)	See document: 200604 - Instruction LED Strip Removal Procedure

- A specific Wago tool #2065 can be ordered separately for wire insertion and release tool:

Signify

n

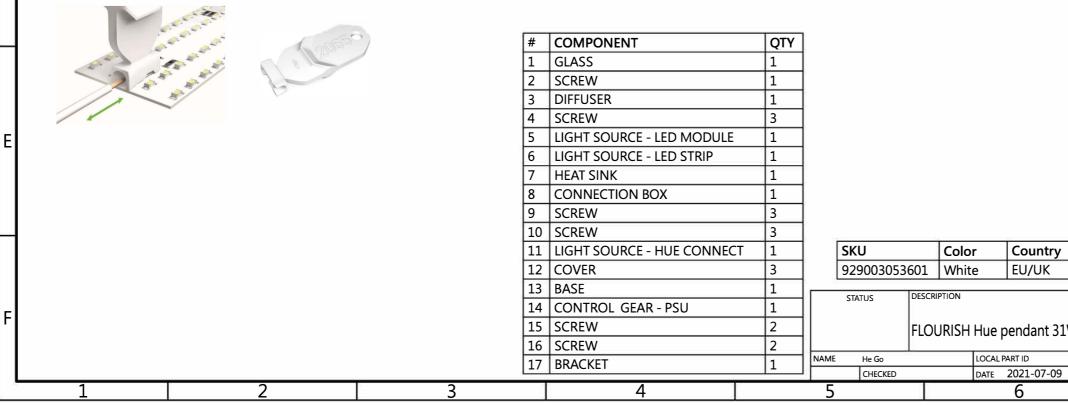

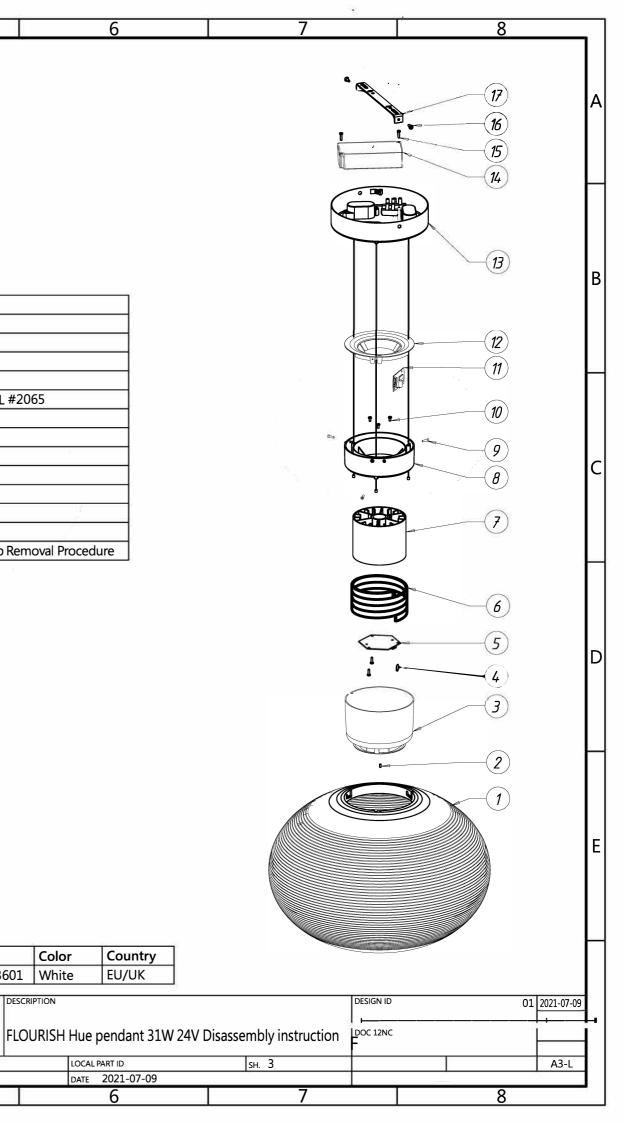

Country

EU/UK

6

