



Warnings

Always make sure the luminaire is detached from the mains socket
 Always make sure the DC cable is detached from the power supply
 Staring at the operating light source may cause eye injury

| # | SLR Description | Tools needed |
|---|---|-----------------|
| a | Rotate the front window [1] by hand clockwise until it unsnaps. Lift the front window up to remove it from the Base [7] | - |
| b | Unplug the flat wire from the Light Source. Unscrew the 3 screws [2] and remove the Light Source [3] | Screwdriver T10 |
| c | Remove the heatsink [4] | - |
| d | Disconnect the cable from the Hue Connect [6]. Unscrew the screw [5] and remove the Hue Connect | Screwdriver |
| e | Pull the cable [8] out of the strain relief and pull it out through the bottom side of the base [7] | = |

| # | COMPONENT | QTY | SKU | Color | Country |
|---|--------------------------|-----|--------------|--------|---------|
| 1 | Front Window | 1 | 929002376101 | White | EU/UK |
| 2 | Screw | 3 | 929002376201 | Black | EU/UK |
| 3 | Light Source LED Module | 1 | 929002376301 | Rose | EU/UK |
| 4 | Heatsink | 1 | 929002376401 | Gold | EU/UK |
| 5 | Screw | 1 | 929002376701 | Silver | EU/UK |
| 6 | Control Gear Hue Connect | 1 | 929002376801 | Copper | EU/UK |
| 7 | Base | 1 | 929002376901 | White | NAM |
| 8 | Cable | 1 | 929002377001 | Black | NAM |
| | | | 929002400901 | Rose | NAM |
| | | | 929002401001 | Gold | NAM |
| | | | 929002401101 | Silver | NAM |
| | | | 929002401201 | Copper | NAM |

| | | | |
|---------|---------------------------------------|--------------------------|---------------|
| STATUS | DESCRIPTION | DESIGN ID | 01 2021-01-29 |
| | Hue Iris Gen4 Disassembly Instruction | DOC 12NC 442295201841 | |
| NAME | Ma Vr | LOCAL PART ID | SH. 1 |
| CHECKED | DATE | 2021-01-29 | SH. 511 |
| | | | A2-P |